


AUSTRALIA TIBA PROCEDURES

(AIP ENR 1.1-91)

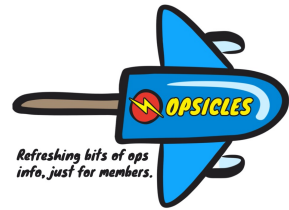

Before entering

- ☐ Prior Approval from ATS
- ☐ Dual Comms Avail
- ☐ Contact FIS for Traffic Info
- ☐ Lights On

TIBA Frequencies

At or above FL200 – **128.95**

Below FL200 – 126.35, or relevant area freq.

Listen Out

Monitor TIBA frequency for 10 mins before entering, and at all times while inside.

Broadcast

Position, level, intentions.

10 min before entering

10 min before reporting points

20 min between reporting points

2 - 5 min before a level change

Any other time deemed necessary

COLLISION AVOIDANCE PROCEDURE

Follow TCAS RA if applicable, otherwise:

Above FL410 – descend 1000'

At or below FL410 – descend 500'

Turn on all lights

Advise other aircraft of action being taken on TIBA freq.

As soon as practical, resume FL and advise on TIBA freq.